

RET KEY:

Exit to time display mode in any operation or setting.

POWER KEY  :

Open/Close the clock.

SOUNKD KEY  :

Close all sound.

NUMBER KEY 0-9:

Adjust number in operation or setting.

(A two-digit input needs to be completed in 2 seconds.)

°C/°F KEY:

Show °C/°F in temperature display mode.

0 KEY(12/24):

Show 12/24 hours mode.(One beep is 12 hours format; three beep is 24 hours format;)

DIM KEY:

Switch Automatic brightness/Manual brightness.

+ - KEY:

8-level brightness control.(Only work properly in Manual brightness.)

T SET:

Time Setting steps : hours-minutes-seconds. Press "UP" key or "DOWN" key to adjust or number key 0-9 to adjust, press "MODE" key to switch digits, press "RET" key after finish setting.

C SET:

Calendar setting, default format: 2000-01-01, Press "UP" key or "DOWN" key to adjust or number key 0-9 to adjust, press "MODE" key to switch digits, press "RET" key after finish setting.

A1-A4 KEY:

Check A1-A4 alarm time, press "MODE" key once to enter the corresponding alarm to see if the alarm is turned on, press "MODE" key twice to enter the corresponding alarm time.

A++ KEY:

Check A5-A16 alarm time, press "MODE" key once to enter the corresponding alarm to see if the alarm is turned on, press "MODE" key twice to enter the corresponding alarm time.

FULL KEY:

Test the LED and the sound, press "RET" key to exit.

(All the LED and sound will be activated).

You can check the clock by this key.

AL ON/OFF:

Set alarm on/off, (If have set the alarm, this key can close all the alarm.)

FLASH KEY:

Set the colon on/off.

ST KEY:

Count up function, start with 00:00, press  to start/pause, press "RET" key to exit, "ST Key" can restore the initial 00:00.

AL SET:

Alarm setting step: AL01 (1-16 groups snooze alarm, press "UP" key or "DOWN" key to adjust or number key 0-9 to adjust) → 01 (---/On) [Snooze alarm close/open, press "UP" key or "DOWN" key to adjust] → 00:00 (Alarm time, press "UP" key or "DOWN" key to adjust or number key 0-9 to adjust), press "MODE" key to switch, press "RET" key after finish setting.

CD SET:

Press the "CD SET" once into the countdown, press "CD SET" twice into the countdown setting. (Press "MODE" key to switch digits, press "UP" key or "DOWN" key to adjust or number key 0-9 to adjust) step: d0 00 (1-999 days) → 00:00 (hours and minutes) → :00 (seconds) → --/on (memory or not → 01 (less than 1-99 seconds to remind) press  to start/pause the countdown, press "RET" key to exit. press  to set countdown prompt. (Mute mode/Sound mode)

DISP KEY:

Fixed display/Cycle display, Press "DISP" key to switch Steps: Fixed Calendar → Fixed Temperature → Cycle display → Fixed Time → ..

Attention:

1. Battery type: CR2032. This battery is used for backup, it can't run the clock, please use the AC adapter. The clock can't be connected directly to the cable.
2. If the clock is crashes, please cut off the power and take out of the battery CR2032 (If have installed), reconnect the power, the clock will reset automatically.