


External Dimension:

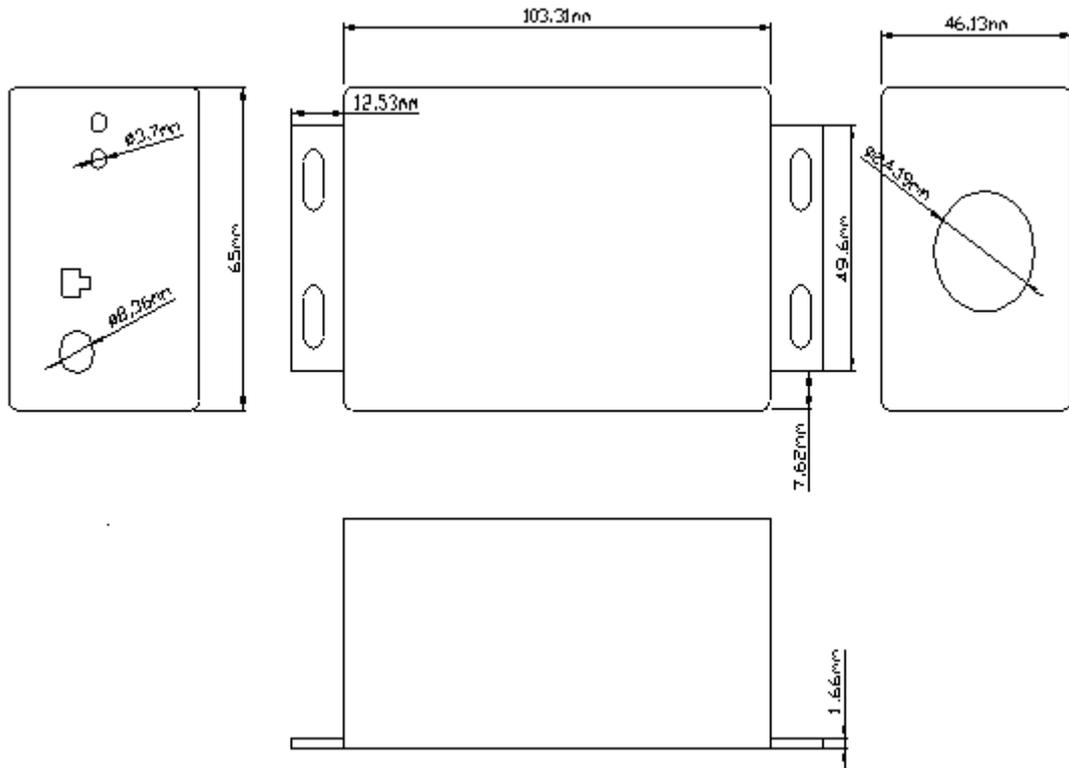

Interface Specifications:

DALI input port and DC power input interface:



DMX output interface:



Direction for use:

1. Connect the load wire first, follow the power wire; **Please ensure short circuit can not occur between connecting wire before you turn on the power;**
2. This product adopt to DALI agreement is IEC60929. DALI module at most can support 64 channels, so DMX output at most can support 64 DMX module. Can realize point to point control, address mapping table as follow:

| DALI 通道地址 | DMX 地址 |
|-----------|--------|
| 0 | 1 |
| 1 | 2 |
| 2 | 3 |
| 3 | 4 |
| 4 | 5 |
| 5 | 6 |
| 6 | 7 |
| 7 | 8 |
| 8 | 9 |
| 9 | 10 |
| ... | ... |
| 62 | 63 |
| 63 | 64 |

Distribute DALI 64 channels when use it, and set corresponding DMX address. DMX address can not be modified, only when the DALI channel address changed, then can modify the DMX address. When the value of each channel in DALI have changed, the value of DMX channel also will change.

3. DALI convert DMX signal dimming curve is converted to a linear dimming.

Typical Application

